




RHCHAIRS.COM

## RH Logic 400 instructions




### Adjusting neck/headrest

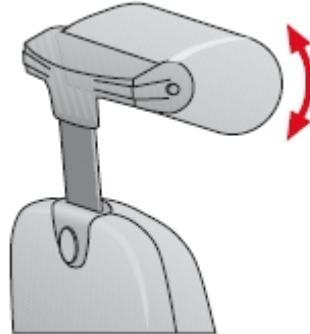


By pulling up and down on the neck rest, you can adjust it to suit.

### Backrest height adjustment

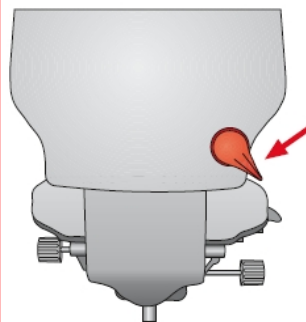


Lift the lever to unlock (adjust height). Push lever down to lock

### Armrest adjustment

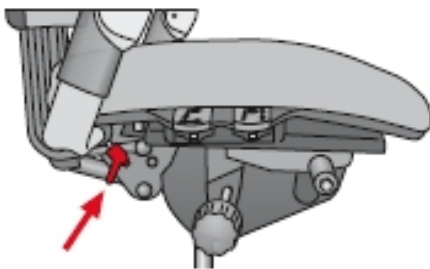

Adjust the width by releasing the lever to give the desired width.

### Adjustable lumbar support

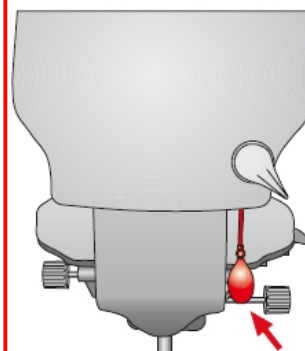

Squeeze lumbar pump to adjust your support, and press button above the pump to release air.




# RH Logic 400 instructions

RHCHAIRS.COM




## Armrest adjustment

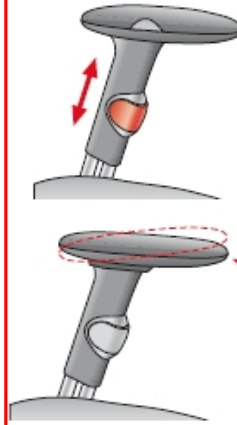

Adjusting the height: Press the button and move the armrest to the desired height. Release the button to lock the armrest in position.

Turn the arm top to adjust the armrest.


## Rocking adjustment

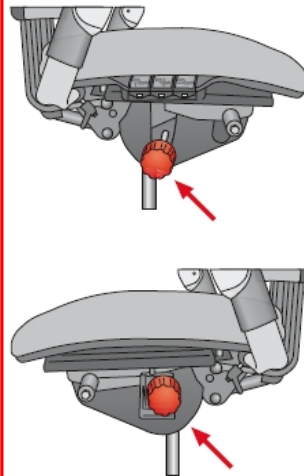

Rotate the hand-wheel backwards to release the balanced rocking function. The mechanism can be locked in any position by rotating the hand-wheel forwards.


Adjust the tension to suit your weight, using the hand-wheel on the left side.

## Adjusting seat height

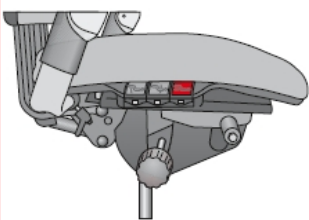


Lift the front lever to adjust the height of the chair.

## Backrest angle

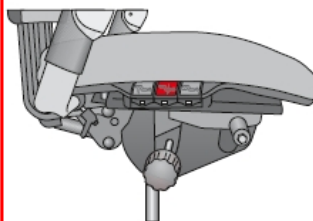

Use the middle lever to adjust the back angle

## Seat slide adjustment

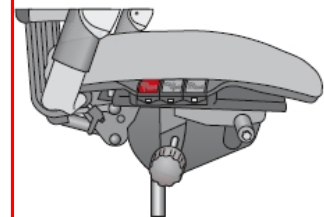

To vary the seat depth, the seat can be moved forwards and backwards using the back lever.